



E70 X5 35D ECU Removal instruction

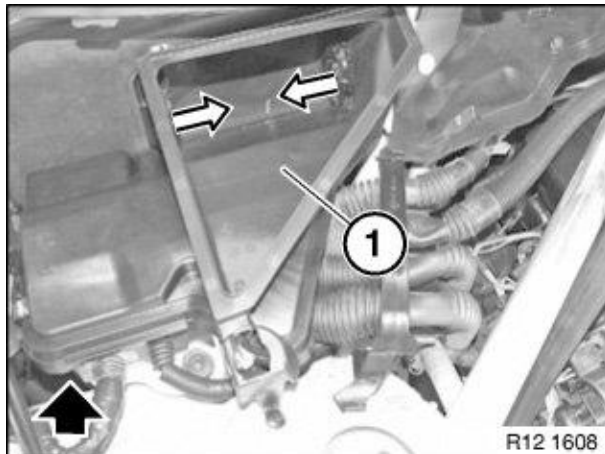

Lever out expanding rivet.
Release locks in direction of arrow.
Feed out fresh-air duct (1) and remove



Open clamps.
Release lock (1) in direction of arrow.
Remove cover (2).

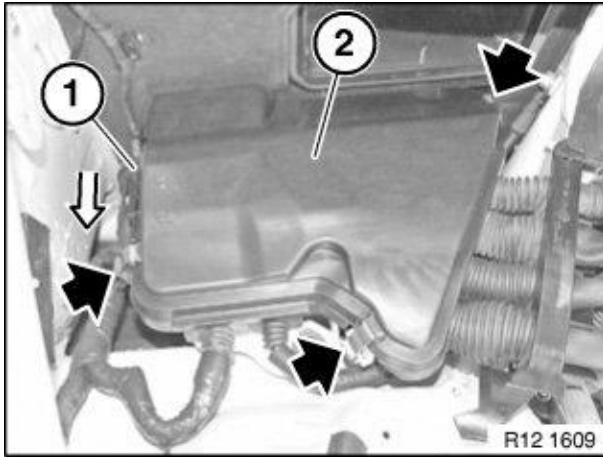

Unplug all connectors from the ECU/ Remove the ECU

